


CALIBRATE IRS-3v4 through Computer

1. Connect cable Asix UCAB232 and IRS-3_Cable between Computer and processor board on IRS-3v4
2. Choose Icas Aspiration Detector Viewer program
3. Choose «Repeat»
4. Choose «Control»
5. Check in «Calib. Enable»
6. Push on «Flow Cal»
 1. You will hear IRS-3 respond with a beep

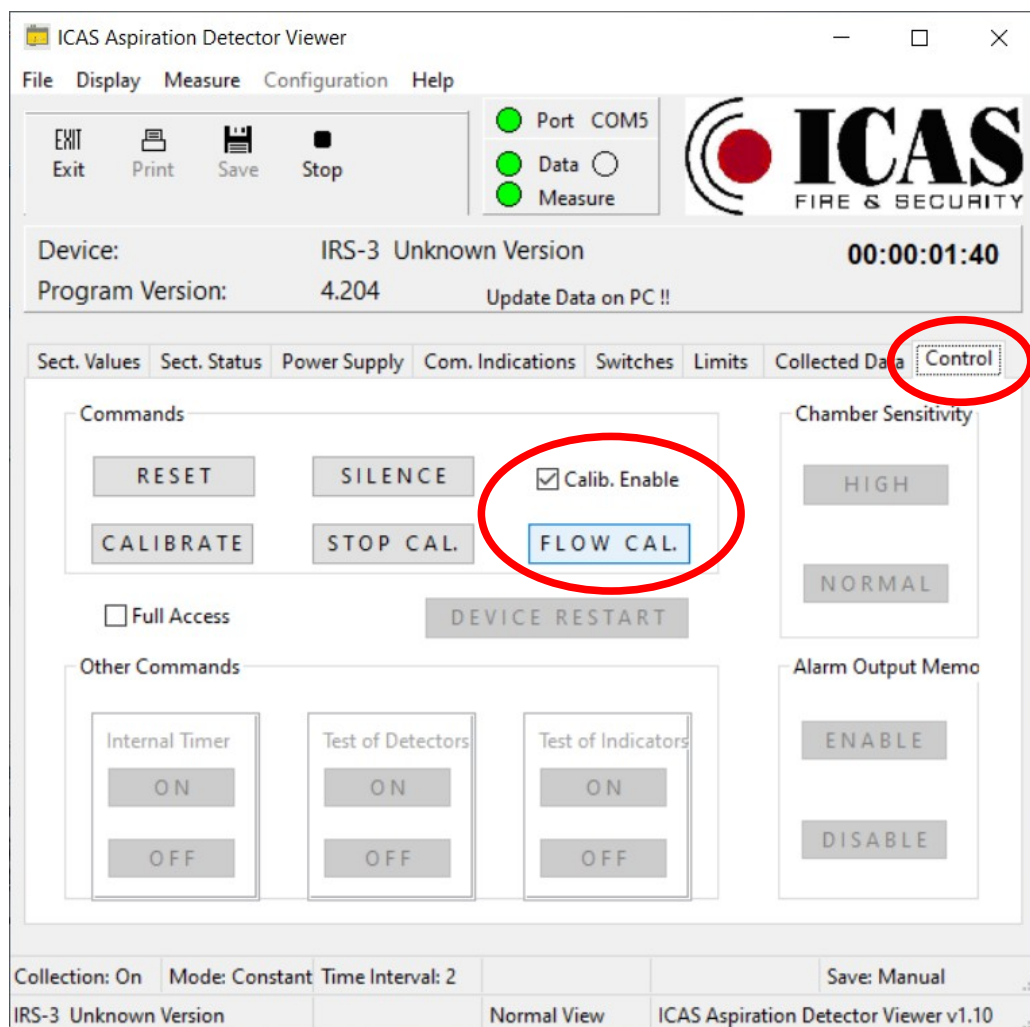

Generally problem solving if you have problem to calibrate:

- IRS-3v4 is under progress and not ready (blinking timer)
- IRS-3 is out of acceptable range
- Try to disconnect battery and power, wait 60 seconds and restart IRS-3
 - Do not adjust anything before timer has stopped blinking, then set calibration by pushing «Calibrate» + «Silence» + «Reset» simultaneously and keep it down until it gives a beep (takes about 5-8 seconds)